


NORMAL WINTER OPERATION – SOLAR OFF

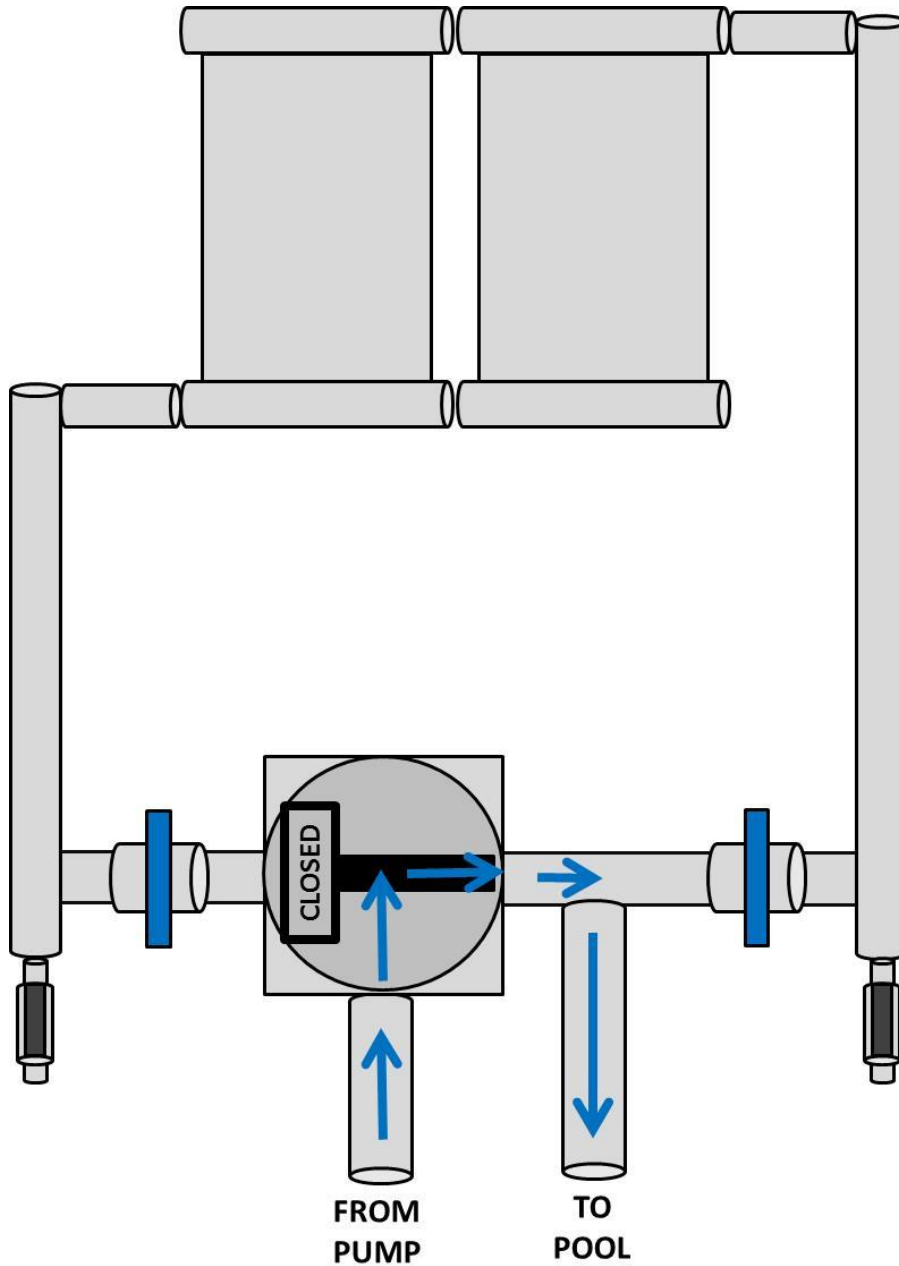

This shows the normal winter operation when:

1. The solar is drained for the winter
2. AND the solar control is set to off.